




Touch Screen (without navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the “Owner’s Manual”.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

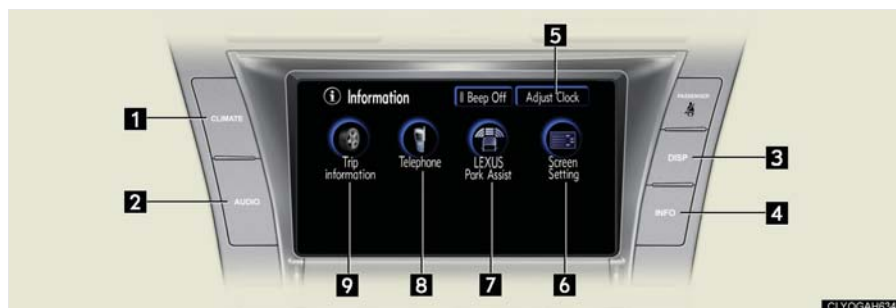

Press the button to display the screen. The “Information” screen shown in the above illustration is displayed when the “INFO” button is pressed.

- 1 “CLIMATE”: Air conditioning operation screen
- 2 “AUDIO”: Audio control screen
- 3 “DISP”: Display screen
- 4 “INFO”: Information screen
- 5 “Adjust Clock”: Adjust clock screen
- 6 “Screen Setting”: Screen setting screen
- 7 “LEXUS Park Assist”: Intuitive parking assist setting screen
- 8 “Telephone”: Telephone screen
- 9 “Trip information”: Trip information screen



Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the “Navigation System Owner's Manual”.

n Basic operation



- 1 Displays the audio control screen
- 2 SURROUND (Surround sound)
ASL (Automatic Sound Levelizer)
- 3 Audio sources
AM•SAT: AM radio
FM: FM radio
DISC•AUX: DVD player/Auxiliary
audio device
- 4 Power/Volume
- 5 Sound quality and balance modes

n Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Scan
All radio stations: press
Preset radio stations: press and hold
- 4 Radio tuner
- 5 Station selection
- 6 Seek

n Entering station presets

- 1 Select the desired station by using the tuner, or the seek or the scan functions.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.



n DVD player

n Playing a DVD



- 1 Displays the audio control screen
- 2 Disc selection
- 3 Disc load
- 4 Track, file and chapter selection/reverse/fast-forward
- 5 Eject

n Playing an audio CD



- 1 Displays the audio control screen
- 2 Displays track list
- 3 Disc selection
- 4 Scan
 - All tracks in current disc: press
 - First track of each disc: press and hold
- 5 Random playback
 - Current disc: press
 - All discs: press and hold
- 6 Disc load
- 7 Track selection/reverse/fast-forward
- 8 Eject
- 9 Repeat
 - Current track: press
 - Current disc: press and hold

n Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the player door opens.

n Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the player door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the player door has opened.
Repeat steps 2 and 3 until you have inserted all discs.
To cancel the operation, press the “LOAD” or “DISC•AUX” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.




- 1 Power on/audio sources: press
Power off: press and hold
- 2 Volume
- 3 Radio mode: Radio tuner
DVD mode: Track/chapter/disc selection
CD mode: Disc/track/file (MP3/WMA) selection


n Rear seat audio controls (if equipped)

Some front audio features can be controlled from the rear seats.

- 5-seat models

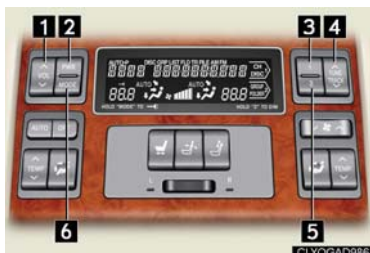

► 4-seat models

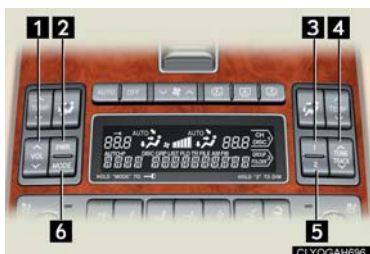

- 1 Volume
- 2 Power
- 3 Disc selection
- 4 Radio: Station selection
Audio CD or DVD audio: Track selection
Video CD or DVD video: Chapter selection
MP3 CD or WMA CD: File selection
- 5 Folder selection
- 6 Audio sources

Front Air Conditioning System (without rear air conditioning system)



- 1 Air conditioning operation screen display button
- 2 Air flow display
- 3 Fan speed display
- 4 Passenger's side temperature control
- 5 Outside air/recirculated air mode button
- 6 Pollen removal mode button
- 7 Windshield defog/defrost
- 8 Off button
- 9 Driver's side temperature display
- 10 Automatic mode button
- 11 Dual mode button
- 12 Driver's side temperature control
- 13 A/C switch



n Using the automatic mode

- 1 Press the “AUTO” button.
- 2 Adjust the temperature using the “TEMP” buttons.

n Adjusting the temperature in dual mode

In dual mode, driver and passenger’s side temperature settings can be adjusted separately.

Press the “PASSENGER TEMP” button to adjust the temperature for the passenger’s side.

To cancel the dual mode, press the “DUAL” button.



Front Air Conditioning System (with rear air conditioning system)



- 1 A/C switch
- 2 Air flow display
- 3 Air conditioning operation screen display button
- 4 Rear air conditioning operation screen display switch
- 5 Fan speed display
- 6 Air purifier and rear air conditioning operation switch
- 7
- 8 Outside air/recirculated air mode button
- 9 Passenger's side temperature display
- 10 Pollen removal mode button
- 11 Windshield defog/defrost
- 12 Off button
- 13 Driver's side temperature display
- 14 Automatic mode button
- 15 Individual mode button
- 16

n Using the automatic mode

- 1 Press the “AUTO” button.
- 2 Adjust the temperature using the “TEMP” buttons.

n Adjusting the temperature in individual mode

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

Press the “PASSENGER TEMP” button to adjust the temperature for the passenger's side.

To adjust the temperature for the rear seats, see page 52.

To cancel the individual mode, press the “4-ZONE” button.




Rear Air Conditioning System (If Equipped)

► 5-seat models




► 4-seat models

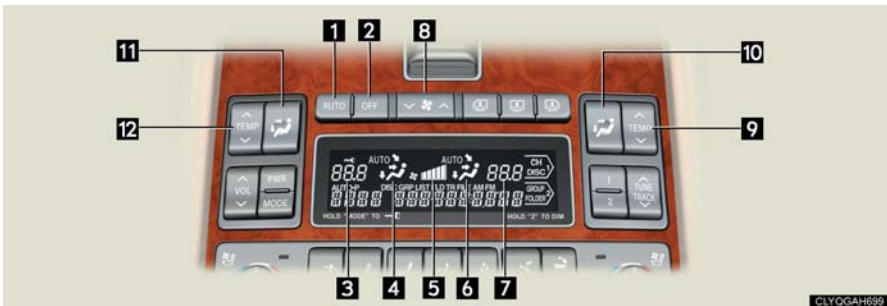

- | | |
|--|--|
| 1 Automatic mode button | 7 Right side temperature display |
| 2 Off button | 8 Fan speed controls |
| 3 Left side temperature display | 9 Right side temperature control |
| 4 Left side airflow display | 10 Changes the right side air outlet used |
| 5 Fan speed display | 11 Changes the left side air outlet used |
| 6 Right side airflow display | 12 Left side temperature control |

n Front controller (touch screen)

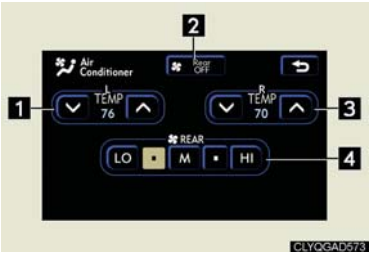


- 1 Left side temperature control switch and display
- 2 Off
- 3 Right side temperature control switch and display
- 4 Fan speed display



Climate Control Seats/Seat Heaters

n Front climate control seats

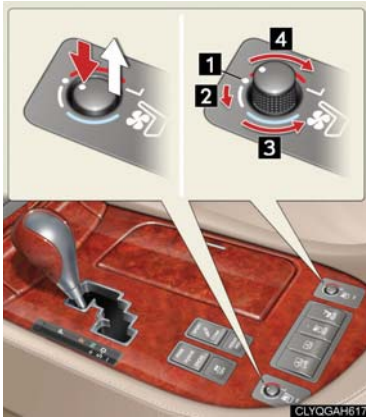

Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1** Off
- 2** Ventilation
- 3** Cool air
- 4** Warm air

n Rear climate control seats (if equipped)

► 5-seat models



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

- 1** Ventilation
- 2** Cool air
- 3** Warm air

► 4-seat models



The rear climate control seats can also be turned on and off from the front seat by pressing the button.





n Rear seat heaters (if equipped)



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.





Heated Steering Wheel



To heat the leather portion of the steering wheel, press the button. Press again to cancel.

Console Box




To open, slide and lift the armrest with the knob pushed in.

There is a power outlet located in the front console box.



Glove Box

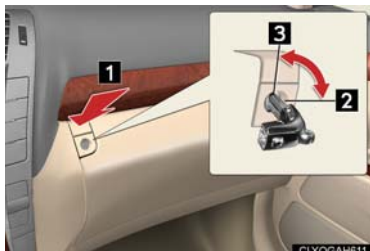

- 1 Open: press the button.
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the mechanical key.



Auxiliary Boxes



- Overhead
To open, press in the button.



- Rear seat (5-seat models)
To open, press the button and lift the lid.



- Rear seat (4-seat models)
To open, press in the lid.




Cup Holders



► Front

To open, press down the lid on the side farthest to the driver.

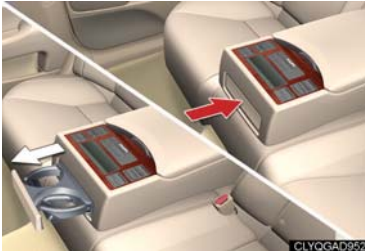

► Rear (5-seat models)

To open, press in and release.




► Rear (4-seat models)

To open, press in and release.




Rear Sunshade/Rear Door Sunshades

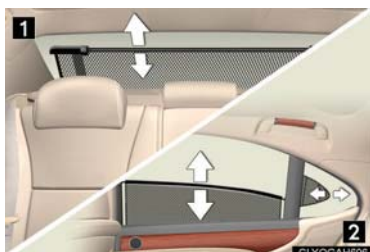


- 1** Rear sunshade
- 2** Rear door sunshades (if equipped)

n Raising/Extending from the front seat

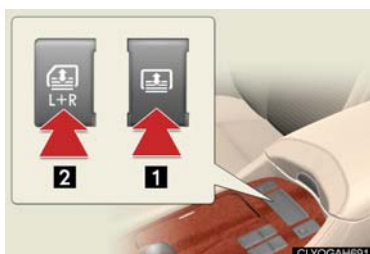


- 1** Raises the rear sunshade
Press the button again to lower it.
- 2** Extends the rear door sunshades
Press the button again to retract them.

n Raising/Extending from the rear seat

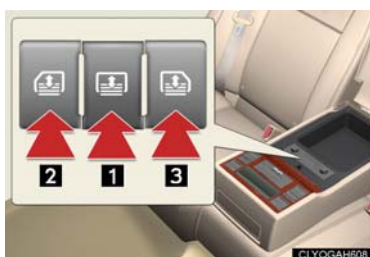

- 5-seat models
- 1** Raises the rear sunshade
- 2** Extends the rear door sunshade (left side)
- 3** Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

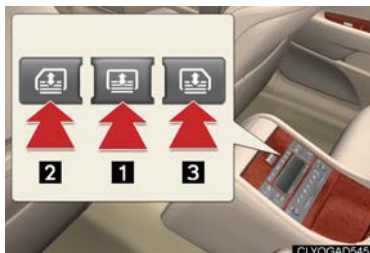

- 4-seat models
- 1** Raises the rear sunshade
- 2** Extends the rear door sunshade (left side)
- 3** Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

How to Program HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.



If the door does not open, press and release the same button once again.

n Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

n Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Lexus Link System (If Equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

n Buttons



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** “SERVICES” button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later play-back
- 5** Emergency button
Makes a priority call to the Lexus Link Call Center



n Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.
- Stolen vehicle location assistance
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn /lights and remote door lock/unlock
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record
You can record a conversation with the Lexus Link Advisor.
- Personal calling from OEM telematic services
The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services.
- Other services
Press the “SERVICES” button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

This system is only operational in GPS (Global Positioning System) and cellular coverage areas.